

{12.29}



myCart® Series Polymer Utility Cart

User-Friendly: Ergonomic handle and additional legroom puts more distance between the shelves and you. You can push the cart more freely without hitting your shins and feet against the cart.

Convenient: The utility tray is roomy enough to store every day objects. It offers 2x the amount of space than traditional utility carts; which allows for objects to fit in comfortably.

Personalized: Each cart comes with two labels for easy identification.

Ultimate Cleanability: Smooth polymer shelf surfaces with contoured edges are designed to resist staining and wipe clean easily.

Corrosion-Proof Shelves: All-polymer shelves will never corrode.

Sturdy Construction: Impact resistant shelves are designed to withstand daily abuse.

- Weight capacities evenly distributed:

MY1627 and MY2030 models: 150lbs. (68kg) per shelf, not to exceed 300lb (136kg) on a 2-shelf cart and 400 lb. (181kg) on a 3-shelf cart.

MY2636 Models: 200lbs. (90kg) per shelf, not to exceed 400 lb. (181kg) on a 2-shelf cart and 500 lbs. (227kg) on a 3-shelf cart.

- Contains Spills: 7/16" (11mm) ship's edge retains small spills and prevents items from sliding off during transport.
- Microban® product protection: Blue myCart only has built in Microban® antimicrobial product protection helps fight the growth of stain and odor-causing bacteria, fungi, mold, and mildew to keep product cleaner between cleanings.
- 2-tier and 3-tier models available
- Easy-to-Adjust: Optional center shelf adjusts on 1" (25mm) increments.
- **myCart® Plus Models:**
 - 5 levels of top shelf adjustment allow operators to align top shelf with worksurfaces to easily slide items on and off cart.
 - Top shelf handle adjustment provides taller users improved ergonomics when moving carts.
 - Storage area increases 4" (102mm) to store and transport larger items.
- Easy, No-Tool Assembly: Ships knocked down.

AVAILABLE
COLORS

Black

Gray

Blue

Purple

Blue

PROTECTION THAT LIVES ON
MICROBAN

with Microban antimicrobial product protection

Not available in Canada




**PLUS
MODELS
CAN ADD UP TO 4"
(102mm) IN HEIGHT**



**Easy
& Useful**

Easy-grip handle
and roomy
utility tray

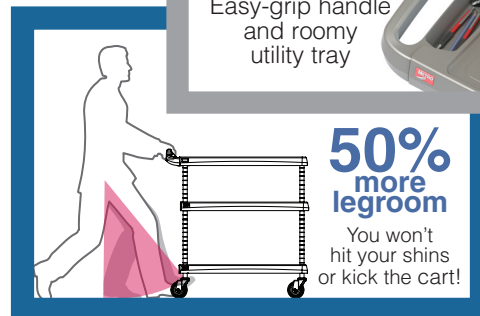

**50%
more
legroom**

You won't
hit your shins
or kick the cart!

NSF

All Metro Catalog Sheets are available on our website: metro.com

Short Form Specs



Base Models:

Carts:

- Consists of at least 2 high-density polyethylene, injection-molded shelves and 4 chrome-plated posts. Handle has an integrated utility tray with a base width of 1.8-2.2" (46-56mm) and coved corners. Flat shelf has a built in 3" (76mm) cutaway. All shelves have a built-in 7/16" (11mm) deep ship's edge around the perimeter. Cart includes two nominal 4.625" L x .88" H (117.475 x 22.352mm) labels for easy identification.
- 1627 and 2030 models: Roll on four 4" (102mm) diameter thermoplastic, mark-resistant swivel/stem casters.
- 2636 models: Roll on four 5" (127mm) diameter resilient rubber swivel/stem casters.

Construction:

- Continuous Usage Temperature: -20/120°F (-29/49°C)
- Carts are not intended for cart wash applications
- Casters:
 - 4" (102mm) swivel caster: Thermoplastic, non-marking gray tread. Plated horn and axle. Replacement part: RPBC4M-4, bag of four.
 - 5" (127mm) swivel caster: Resilient rubber material, plated horn and axle. Replacement part: 5M, sold individually.

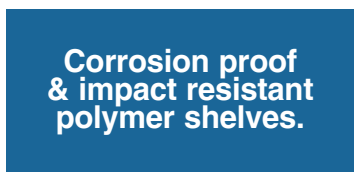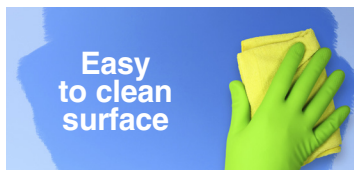

myCart Series®

Width/Length/Height (in.) (mm)		Description	Load Rating Per Cart (lbs.) (kg)		Gray	Black	Blue	Purple
					Cat. No. Gray	Cat. No. Black	Cat. No. Blue Microban®	Cat. No. Purple
18.312x31.5x35.5	465x800x902	2-shelf	300	136	MY1627-24G	MY1627-24BL	MY1627-24BU	—
18.312x31.5x35.5	465x800x902	3-shelf	400	181	MY1627-34G	MY1627-34BL	MY1627-34BU	—
23.88x34.38x35.5	595x873x902	2-shelf	300	136	MY2030-24G	MY2030-24BL	MY2030-24BU	MY2030-24AP
23.88x34.38x35.5	595x873x902	3-shelf	400	181	MY2030-34G	MY2030-34BL	MY2030-34BU	MY2030-34AP
27.69x40.25x36.88	703x1022x937	2-shelf	400	181	MY2636-25G	MY2636-25BL	MY2636-25BU	—
27.69x40.25x36.88	703x1022x937	3-shelf	500	227	MY2636-35G	MY2636-35BL	MY2636-35BU	—




myCart® Plus

Width/Length/Height (in.) (mm)		Description	Load Rating Per Cart (lbs.) (kg)		Black
					Cat. No. Black
18.312x31.5x35.5-39.5	465x800x902-1004	2-shelf	300	136	MY1627-24BL-PL
18.312x31.5x35.5-39.5	465x800x902-1004	3-shelf	400	181	MY1627-34BL-PL
23.88x34.38x35.5-39.5	595x873x902-1004	2-shelf	300	136	MY2030-24BL-PL
23.88x34.38x35.5-39.5	595x873x902-1004	3-shelf	400	181	MY2030-34BL-PL
27.69x40.25x36.8-40.8	703x1022x937-1039	2-shelf	400	181	MY2636-25BL-PL
27.69x40.25x36.8-40.8	703x1022x937-1039	3-shelf	500	227	MY2636-35BL-PL



There's a size to fit you perfectly.

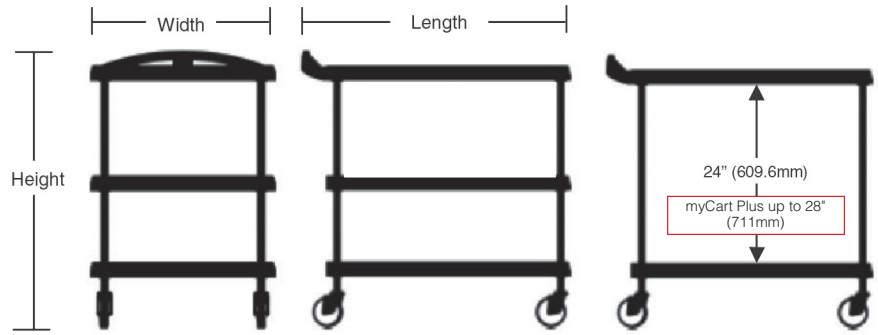


PLUS
MODELS
CAN ADD UP TO 4"
IN HEIGHT



MY1627

Easy-grip handle and utility tray


- Small footprint for tight spaces.
- Accommodates Metro tote boxes and ISO totes.

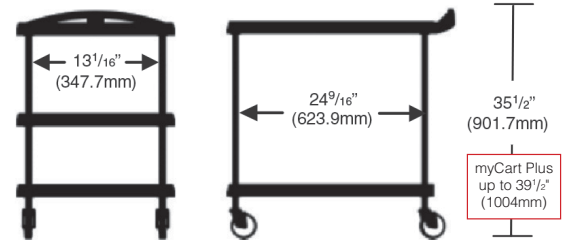

MY2030

MY2030 cart handle has built-in recessed support channel to manage odd shaped items.


- Right-sized to fit : Glass & dish racks, bussing totes, silverware bins, milk crates.

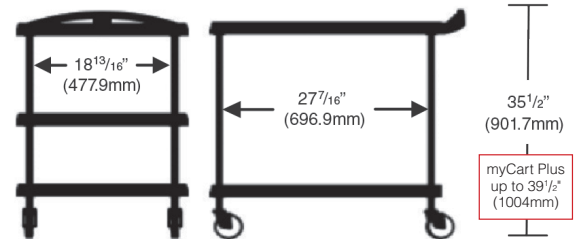

MY2636

MY2636 cart handle has a built-in slot to hold scanners and labels.

- Ideal for large bulky items. 5" (127mm) Caster makes cart easier to maneuver. 3-shelf model holds up to 500 lbs.

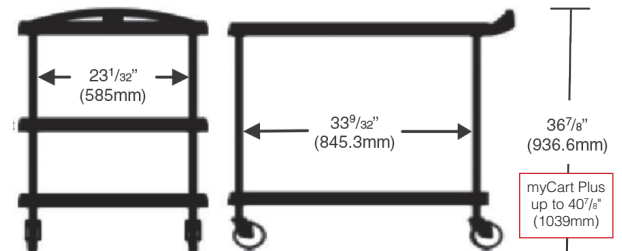


{12.29}



myCart® Series Polymer Utility Cart



Wastebasket
and Holder

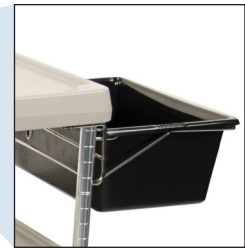

Utility Bin
and Holder

myCart Accessories

- Utility bin and wastebasket fit myCart models only. Not compatible with myCart Plus.

Width/Height/Depth (in.) (mm)		Description	Fits Cart	Load Rating (lbs.) (kg)		Approx. Pkd. Wt (lbs.) (kg)		Cat. No.
17.88x16.25x14.75	454x413x375	Wastebasket + Holder	MY1627	25	11.3	5.7	2.5	MYWB1
23x16.25x14.75	584x413x375	Wastebasket + Holder	MY2030	25	11.3	5.8	2.6	MYWB2
14.38x15.38x10.38	365x391x264	Wastebasket Only				2.8	1.3	MF222
17.38x7x15.25	454x178x387	Utility Bin + Holder	MY1627	25	11.3	5	2.2	MYUB1
23x7x15.25	584x178x387	Utility Bin + Holder	MY2030	25	11.3	5.1	2.3	MYUB2
16.38x6x11	416x152x279	Utility Bin Only				2	0.9	UB1

Personalization Labels

Personalization labels provide easy identification

- Constructed of polyester material with a clear polyester flap to protect written information from wiping off.

4.37"L x .875"H (117.5x22.4mm)

Cat. No. MYCARTLBL-10PK (Pack of 10)

Replacement Casters

4" (102mm) non-marking swivel caster.

Used with MY1627 and MY2030 models.

Cat. No. RPBC4M-4 (Bag of 4)

5" (127mm) swivel resilient rubber caster.

Used with MY2636 models.

Cat. No. 5M (sold individually)